

DSC QUICK REFERENCE GUIDE

SECURITY SYSTEM QUICK REFERENCE GUIDE

TO ARM ENTIRE SYSTEM — BOTH INTERIOR AND PERIMETER

- Close all windows and doors (the green Ready light will turn ON)
- Press and hold Away button for 2 seconds (the keypad will beep rapidly 5 times and the red Armed light will turn ON)
- Exit premises before the delay time expires

TO DISARM SYSTEM WHEN YOU RETURN

- When you enter through the door, the keypad will emit a steady warning tone
- Enter your 4-digit Master Code or User Code (the armed light will turn OFF)
- If you make an error, press # and enter the 4-digit code again

TO ARM PERIMETER OF BUILDING AND STILL MOVE FREELY INSIDE

- Press and hold Stay button for 2 seconds

TO SILENCE ALARM

- Enter your 4-digit Master Code or User Code

WHEN TROUBLE LIGHT COMES ON

- Press v 2
- Some keypads will describe the Trouble (full-message keypads); others will only identify the Trouble number (fixed-message and LED keypads)
- If Trouble number 8 is lit, the time and date needs to be reset (see reverse)
- For all other trouble conditions, contact your security provider

TO SET TIME AND DATE

- Press v 6 and enter the 4-digit Master Code
- 1 long beep indicates an error, press # and enter the Master Code again
- After 4 short beeps, press 1 then 10 digits, 2 each for the hour, minute, month, day and year (HH:MM MM/DD/YY)
 - Use a 24-hour dock (e.g. 8:30 pm = 20:30)
 - Use 2 digits each to indicate the month and day (e.g. March 8 = 03 08)
 - Only enter the last 2 digits of any given year (e.g. 2007 = 07)

TO ENABLE DOOR CHIME FEATURE

- Press and hold Door Chime button for 2 seconds
- 3 beeps = ON: 1 long beep = OFF

TO SOUND AN ALARM MANUALLY

- Press and hold Fire or Panic button for 2 seconds