

Simon XT system quick reference

Task	Instructions
Level 0: Subdisarm the system	Control panel: Enter the master code while the system is disarmed. Telephone: Press 1.
Level 1: Disarm the system	Control panel: Press Disarm and enter your access code. Remote touchpad: Press Disarm. Key fob: Press Unlock. Telephone: Press 1.
Level 2: Arm doors and windows	Control panel: Press Doors+Windows and enter your access code (if required). Remote touchpad: Press Arm Doors+Windows. Key fob: Press Lock. Telephone: Press 2.
Level 3: Arm motion sensors	Control panel: Press Motions and enter your access code (if required). Remote touchpad: Press Arm Motion Sensors. Telephone: Press 3.
Level 4: Arm doors, windows, and motions	Control Panel: Press Doors+Windows, enter your access code (if required) and press Motions. Remote touchpad: press Arm Doors+Windows, and then press Arm Motion Sensors. Key fob: Press Lock twice. Telephone: Press 2 3.
Activate no delay	Control panel: Press Doors+Windows twice. Remote touchpad: Press Arm Doors+Windows twice. Key fob: Press Lock. Telephone: Press 2 3.
Activate latchkey	Control panel: Press Motions, enter your access code (if required), and the press Motions. Remote touchpad: Press Arm Motion Sensors twice. Key fob: Press Lock three times. Telephone: Press 3 3.
Activate panic alarm	Control panel: Press Fire, Emergency, or Police twice within 3 seconds, or hold it for 2 seconds. Remote touchpad: Press and hold both emergency buttons for 3 seconds. Key fob: Press and hold Lock and Unlock for 3 seconds.

Task	Instructions
Check system status	Control panel: Press Status. Remote touchpad: Press System Status. Telephone: Press 0.
Toggle chime or special chime mode	Control panel: Scroll to Chime or Special Chime, press Enter, toggle on/off, and press OK.
Specific light on	Control panel: Press * <unit num> Remote touchpad: Press Light On <unit num> Key fob: Press * Telephone: Press * <unit num>
Specific light off	Control panel: Press # <unit num> Remote touchpad: Press Lights Off <unit num> Key fob: Press * Telephone: Press # <unit num>
All lights on	Control panel: To turn on all lights controlled by lamp modules, press * twice. Remote control: Press Lights On twice. Key fob: Press Lights On. Telephone: Press * twice.
All lights off	Control panel: To turn off all lights controlled by lamp modules, press # twice. Remote control: Press Lights Off twice. Key fob: Press Lights Off. Telephone: Press # twice.
Bypass a sensor	Control panel: Press Bypass, enter your master code, and scroll to the sensor and press Bypass.